

## DC-AC Powr Inverter User's Manual

### 800W-1500W

#### I. Description

A power inverter is a kind of product that transforms DC electricity to AC electricity, then offers power to small electrical equipment and digital products. It has been widely used in cars, steamboats, mobile officing post and telecommunications, public security, emergency and so on.


This power inverter has adopted the international lead circuit design, with the advantage of small size, light, stable, and high conversion efficiency. It has five kind of protect function such as: input under voltage protection, input over voltage protection, overload protection, over temperature protection, output short circuit protection. These five functions can protect the electrical equipment and the circuit of the car.

Please read this carefully before using. This manual applies to 800W .1000W, 1200W and 1500W series of products.

#### II. Products and wiring diagram

- |                             |                           |
|-----------------------------|---------------------------|
| 1. Fan;                     | 5. Fault light red light; |
| 2. DC input "+" terminal;   | 6. USD port;              |
| 3. DC input "-" terminal;   | 7. AC output socket;      |
| 4. Power light green light; | 8. On/Off switch          |

Products and wiring diagram

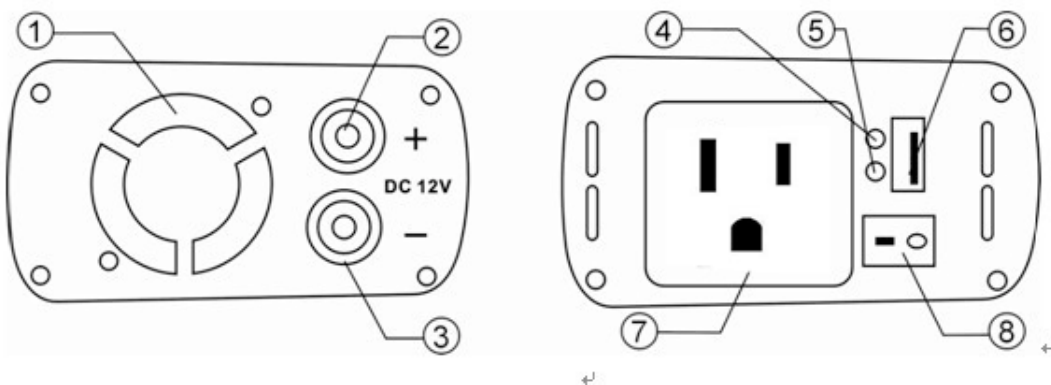



Battery clip cable

(The above picture just for reference ,may have a little difference from the real products)

### III. While connecting with the products

Connecting In a wrong way will destroy the power inverter as well as the electrical equipment, please follow the following steps and sequence and make sure use the products in a right way.

1. When use in the car, please connect the inverter with the DC cigar lighter port.
  - ① Connect the red side of the cigar lighter with “+” terminal and fix it, the black side connect with “\_” terminal and fix it; Do not mix them or it will destroy the inverter.
  - ② Insert the cigar lighter to the DC port of the car, turn on the power inverter, the green LED light will on.
  - ③ Insert the plug of the electric equipment into the AC socket of the inverter.
  - ④ Notice: When using the power inverter in the car please do not exceed150W or it will destroy the inside wire of the car and it will be dangerous.
2. When using outside car and exceed 200W:
  - ① When using outside car and exceed 200W please use the battery clip cable to connect with the battery.
  - ② The battery clip cable have red and black two cables, connecting the red cable with “+” and fix it , connecting the black cable with the “\_” and fixed it;
  - ③ The clip on the red cable connect with “+” terminal of the battery and the clip on the black connect with the “\_” terminal. Do not reverse or it will destroy the power inverter.
  - ④ Turn on the power inverter, the green light will on; Insert the plug of the electric equipment into the AC socket of the inverter.
3. Scope of application and related matters:
  1. Electrical equipment can be used:



- ① Office equipments: Computer, scanner, printer, facsimile printer, min-duplicator, projector, working light;
  - ② Digital products: All kinds of mobile phone/digital camera/digital projector, PDA, palm computer, recreational machines;
  - ③ Small house electrical equipment: TV, fan, water dispenser, dust collector, small electric iron, hair drier and so.
  - ④ Hardware appliance: Portable electric drill, waxing machine, electric iron and so on.
2. Scope of electric appliance that inapplicability
- ① All electric appliances that exceed the rated power of the inverter;
  - ② Generally capacitive load and perceptual load appliances are not inapplicability: Air condition, high power electric drill, fridge, microwave oven, blender;
  - ③ We do not recommend using this inverter with appliances which have strict requirement on power supply, such as precise equipments, if use ordinary power inverters with this kind of equipment will affect the measuring data.
3. Scope of electric appliance that inapplicability with the USB (Only for inverters with USB port)
- ① USB is only for charging, do not have data exchange function;
  - ② Before charging please check carefully if the charging current of the appliance is under the inverter's current, if it exceeds the charging current of the inverter please do not use, or it may destroy the USB port.
  - ③ Some appliance must charging use certain charger, please use the certain charger to charging.
4. Please use the inverter in ventilate condition and make sure the fan is not blocked. Do not put the inverter under rain or in humid place, keep it dry. In order to keep a long lifespan of the inverter, please keep it work under 85% of the related power.
6. The inverter have input under voltage protect function, input over voltage protect function, over load protection function, over temperature protect function and short circuit protect function. If these happened, the inverter will stop work, if you want it start work again please turn off the switch and turn it on again.
7. To save energy, the fan will not work unless the under two situations:
- ① The fan will work when the load is exceed 30% of the related power of the inverter;
  - ② When the inside temperature of the inverter exceed 60 degree the fan will work.



8. About use extended cable:

① We do not recommend use extended cable between the inverter and the battery, because it will case lost of DC electricity and affect the effect of the inverter.

② If really need use extended we suggest you use high quality cable to reduce the loss of electricity.

9. Other matters:

① This is modified sine wave inverter; When measuring the voltage please use precise equipment. (RMS)

② When supper power to audio system, radio or TV, the appliance may have interference and this is normal phenomenon;

③ When using in cars, please stop use the inverter while the engine stopped;

④ Please do not open the inverter, if need mending please ask professional person to mend it.

#### **IV、 Security matters:**

1. Please do not operate the inverter while your hand is wet, Keep it from the touch of children.

2. The temperature of the shell will be high after longtime working, so do not touch it in case scalded;

3. Do not put metal into the inverter in case not to electric shock.

4. Do not touch the metal of the socket while insert the plug to the socket of the inverter.

5. Keep the inverter away from explosives;

6. Keep all AC electric away from the inverter, it will damage the inverter and also may case electric shock.



### V、 Protect function and Restart work method;

Function	State description			Restart work method
	LED light	alarm	AC output	
Input under voltage alarm	Green on Red off	Alarm	AC have output	When the voltage of the batter return to the related voltage please turn the switch on again, green light on, red light off.
Input under voltage shut down	Green on Red on	No alarm	No AC output	
Input over voltage protection	Green on Red on	No alarm	No AC output	When the voltage of the batter return to the related voltage please turn the switch on again, green light on, red light off.
Over load protection	Green on Red on	No alarm	No AC output	Reduce the load to related rang please turn the switch on again,, green light on, red light off
Over temperature shut down	Green on Red on	Alarm	No AC output	When the inside temperature return to related rang, please turn the switch on again, green light on ,red light off.
Output short circuit				

(Note: If with USB port ,the USB port can work normally under all kinds of protection condition.)

### VI、 Waste dispose:

Please do not discard the products when it is useless, otherwise it will case pollution to the environment.



## VII、 Specification:

Model		800W	1000W	1200W	1500W
Input DC power		DC 12V (DC 11-15V)			
		DC 24V (DC 22-30V)			
Output AC power		AC 100V ± 10% / AC 110V ± 10% / AC 220V ± 10%			
Output frequency		55 ± 3Hz / 60 ± 3Hz / 50 ± 3Hz			
USB output (if have)		DC 5V (500mA or other)			
DC port output (if have)		DC 11-15V (Max 150W)			
		DC 22-30V (Max 150W)			
Continuous power		800W	1000W	1200W	1500W
Peak power		1600W	2000W	2400W	3000W
Output wave		Modified sine wave			
Efficiency		>80%			
No load current		<0.45A			
Input under voltage alarm	12V input	DC 10.2 – 10.8V			
	24Vinput	DC 20.4 – 21.6V			
Input under voltage shut down	12Vinput	DC 9.2 – 9.8V			
	24Vinput	DC 18.4 – 19.6V			
Input over voltage shut down	12Vinput	DC 15 – 16V			
	24Vinput	DC 30 – 32V			
Overload shut down		Overload shut down	1200W – 1300W	1440W – 1560W	1800W – 1950W
Fuse	Fuse				
The best working temperature		The best working temperature			
Cooling method		Cooling method			
Accessories		Accessories			